



QSR-2150™ and QSR-2150A™ Sensors with Digital Output

Quantum Scalar Irradiance PAR Surface Reference Sensor

Measuring Scalar Irradiance in air over the PAR Spectral Region¹

The QSR-2150 is a fourth-generation **scalar PAR sensor** with digital output. The QSR-2150A has identical performance characteristics but is equipped with a rugged MCBH4M marine grade bulkhead connector suitable for longer term deployments in harsh environments. Compared to the original QSR-2100 model, the QSR-2150 offers a better signal-to-noise ratio, easy-to-interface ASCII output, and superior dynamic range. The QSR-2150 measures Photosynthetically Active Radiation (PAR) with Biospherical Instruments' proprietary scalar irradiance collector. This unique design ensures nearly uniform directional response over 3.6π steradians. The instrument is equipped with a detachable field-of-view cutoff shield to limit its response to light from the upper hemisphere (2π steradians). The photo shows two QSR versions, one with and one without the shield installed.

A stainless-steel encased, optical light pipe guides flux from the collector to a filtered silicon photodetector, resulting in a flat quantum response over the PAR spectral region (400–700 nm). The spectral response is shaped by a combination of absorbing glass and custom dichroic filters to accurately cover the PAR spectral region and block out-of-band radiation. The QSR-2150 is calibrated for use in air and designed to complement our line of **QSP** underwater instruments. QSR versions with analog output are also available.



Key Features:

- Ideal to measure **light available for photosynthesis** from almost **all directions**.
- **Compact, rugged, and low-cost**.
- Uses **optimized 24-bit ADC** for **large dynamic range**.
- ASCII text output for **easy integration with data acquisition systems**.
- **Sensor temperature** and line voltage may be enabled in the data stream.
- **Fast sampling**: time constant of sensor is < 0.01 s, sample rate is up to 250 Hz.
- 1.9 cm (3/4") diameter solid Teflon® spherical irradiance collector.
- Calibration factors are stored in the instrument;
- **Logger2150 software** is included, allowing direct connection to a PC or laptop computer using BSI's serial-to-USB converter.
- **Reduced power consumption** (< 5 mA @ 6-15 V).
- Options for **networking multiple sensors**.
- Tested with cables > 200 meters in length.
- Analog output versions are available, see the QSR-2200 and QSR-2250.

¹ Several terms are in use to denote the physical quantity measured by a "Quantum Scalar Irradiance PAR Sensor" including: "quantum scalar irradiance," "quantum flux density," "photosynthetic photon flux fluence rate," and "photon flux fluence rate."

QSR-2150 Specifications

Measurement Quantity

Quantum Scalar Irradiance for PAR (Photosynthetically Available Radiation or Photosynthetically Active Radiation). This quantity is sometimes also referred to as PPFFR (Photosynthetic Photon Flux Fluence Rate), SPPFD (Spherical Photosynthetic Photon Flux Density), quantum scalar irradiance, quantum flux density, or photon flux fluence rate. For PPFD (Photosynthetic Photon Flux Density) measurements, please see our line of instruments equipped with a cosine collector such as the QCR-2150.

Optical Features

Scalar Irradiance Collector: 1.9 cm (3/4") diameter solid Teflon® sphere, optically connected to the main housing by a stainless-steel encased glass light pipe.

Directional Response: Each instrument's directional response is measured without the field-of-view cutoff shield and optimized before final calibration. Deviations from the ideal uniform response for sensors are (Fig. 1):

- < ±3% for incidence angles < 90°
- < ±10% for incidence angles < 125°

With the cutoff shield installed, the directional response is limited to 90° (2 π steradian) to eliminate the detection of radiation reflected off the ground. Individual directional response plots are also available as an option.

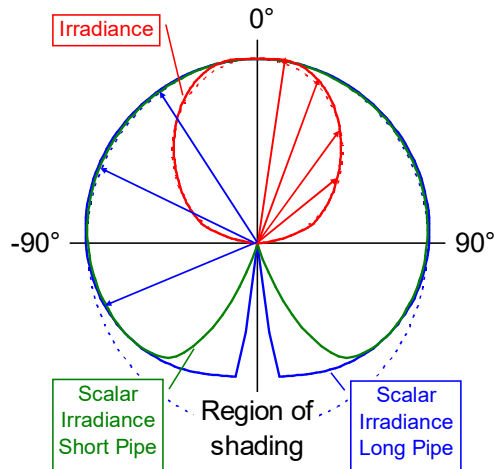


Fig 1. Typical directional responses of scalar irradiance sensors with short (green) and long (blue) light pipe, and a QCR irradiance sensor (red). Thin broken lines indicate the ideal responses for the three geometries. The QSR-2150 uses a short light pipe.

Spectral Response: Sensor approximates the spectral response of PAR. The ideal PAR response is zero below 400 nm and above 700 nm, and constant between 400 and 700 nm. No real sensors can emulate an instant transition from zero to a constant value at 400 and 700 nm. Each BSI PAR sensor is individually optimized to ensure that its spectral response falls within the lower and upper limits shown in Fig. 2.

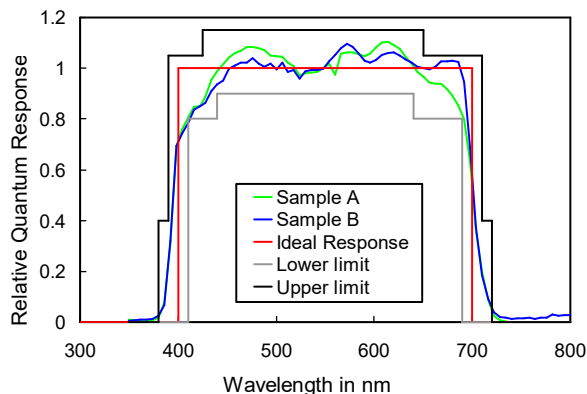


Fig 2. Typical spectral response of two PAR sensors (Sample A and B) compared with the ideal PAR response (red) and the acceptable range (lower and upper limit).

Electronic Features

Photodetector: High-reliability silicon photodiode designed for precision radiometry.

Time Constant: < 10 ms, limited by maximum sampling rate of 250 Hz. Large sampling rates require higher baud rates. Effective resolution declines as the sampling rate increases.

Stability of dark reading: < 0.003 $\mu\text{E m}^{-2} \text{sec}^{-1}$ (tested between 0 to 50 °C)

Saturation: approximately 6000 $\mu\text{E m}^{-2} \text{sec}^{-1}$.

Responsivity temperature coefficient: < 0.05% per °C

Power Requirement: 6-15 V, at typically 4 mA. These sensors were originally introduced as "port-powered" because most PCs at the time provided sufficient power from the control lines (DTR, RTS) of the serial port to run the instrument. More recently, these ports have disappeared from PCs and laptops entirely. Some "USB-to-serial" adaptors will supply sufficient power, but many do not, so Biospherical Instruments offers specially modified USB-to-serial converters ("dongles") at a modest cost that are ideal for connecting a QSR-2150 sensor to a USB port (see Options and Accessories).

Digitization: 24-bit analog to digital converter (ADC) operating at frequencies of 4 to up to 250 Hz with 1–65,000 samples averaged (user selectable) prior to transmission. When averaging 12 samples at 125 Hz, data are transmitted at approximately 10 Hz. Data acquisition and transmission rates are supported from < 2.8 10^{-4} Hz (60 minutes) to 250 Hz, but the useable sampling rate may depend on the configuration of the data logger or computer.

Physical specifications

Housing: Hard-anodized, O-ring sealed aluminum. Consult factory for other material options. The housings are connected via a 1 μF capacitor to ground potential.

Temperature range: -10 to 50 °C

Dimensions:

- Diameter without shield: 5 cm
- Diameter of shield: 20 cm
- Height: 19 cm.

Connectors:

- QSR-2150: Switchcraft EN3P5M
- QSR-2150A: SubConn MCBH4M

Weight: 1.5 kg with shield

Calibration

Each sensor is calibrated using a National Institute of Standards and Technology (NIST) traceable 1000-watt type FEL Standard of Spectral Irradiance using procedures recommended by NIST. Annual recalibration is strongly recommended.

Sensors are shipped with a calibration certificate listing calibration factors to convert raw data measured to calibrated data in units of $\mu\text{E m}^{-2} \text{sec}^{-1}$ or $\mu\text{E cm}^{-2} \text{sec}^{-1}$. Note that a μE or "microEinstein" is a micromole of quanta (6.023×10^{17} quanta). The software allows the user to change the calibration factor, along with other parameters such as sampling rate.

Data format

Data Format: RS-232 clear text ASCII, 9600-n-8-1. Other baud rates that can be selected including 19200, 38400, 57600, 115200, and 230400 baud. When auxiliary channels are enabled, data are comma separated.

Data Output: Data output may be chosen between volts, volts-offset (default), calibrated irradiance, or calibrated irradiance adjusted for immersion in water. Optionally, sensor temperature and line voltage may be included in the data stream. A preamble may be defined to the data frame to easily identify data in a multi-sensor environment. For example "\$" may be used in a NEMA application. As delivered, the output is in volts-offset.

Typical output data stream: Displayed are irradiance in $\mu\text{E m}^{-2} \text{sec}^{-1}$, temperature in °C and line voltage in volts:

```
.013016, 16.06, 6.137
.012990, 16.06, 6.137
.012998, 16.06, 6.137
.013000, 16.06, 6.137
```

Modes of Operation / Multiple Sensor Operation

Sensor can be configured to be either **free running** at the desired rate or **polled** at up to the desired rate. Note, polling is only available on our most recent models, and can be retro-fitted at the factory on older models. Sampling at higher speeds require baud rates of larger than 9600 baud, and sampling at the highest speeds may not be achievable with polled sampling.

For applications needing multiple sensors, each sensor can be assigned a "tag" from the letters "ABCDEFGHIJK" to identify the sensor. The command "*" sent to all sensors is given to start sampling, followed by the command ">A" to retrieve data from sensor "A", ">B" for data from sensor "B", and so on. Multiple sensors can be cabled so that they share data in, data out, power and ground, terminating at a single serial port for monitoring multiple locations or depths.

Software

The sensor can either be operated with a generic **terminal emulation program** such as HyperTerminal or RealTerm, or with a dedicated software called **Logger2150**. Because the sensor output is in ASCII text, any program that can interface with a serial port and can parse ASCII text can be used to operate the instrument and record data. This includes **LabVIEW** and many popular **data loggers** that support serial data acquisition. Contact Biospherical Instruments for further information and recommendations.

Operation with terminal emulation program: Upon pressing "enter" in the terminal program, the following clear-text menu will be provided to allow sensor configuration, calibration constant setting and retrieval, dark correction, internal averaging, data output rate, and other features.

```
Biospherical Instruments Inc: Digital Log Engine v: 2.0beta
Model: QSP2150 70487
A to set number of samples averaged before update: 2
B to set the baudrate, now: 230400
C to set the Calibration Factor for digital output: 10.550001
D to set the description available for display in software: QSP
I to sent unit ID and serial number (password protected)
J to set the immersion factor (not automatically applied): 0.566400
K to set dark zero, currently dark = 0.000000v.
M to set the operating mode (0=streaming, 1=polled with tag= A) currently 0
O to configure the OUTPUTs, temperature is disabled, line voltage is disabled
P to set a preamble for the data transmission =
Q to toggle quiet mode at startup (no diagnostic messages=1): 1
R to set ADC sample rate: 250
S to send ADC diagnostic information
T will give the latest temperature reading
U sets the calibration units: uE/cm2sec
W to set the how calibration constants are used
Calibration Mode = D
Output is in VOLTS with NO OFFSET subtracted.
X to restart sampling
Sensor temperature: 27.68 C
Input Supply Voltage measures 7.515v
```

Logger2150: A sophisticated software package called Logger2150 is available at no cost to customers who prefer to use dedicated software instead of a terminal emulation program. Logger2150 is a Windows-compatible data acquisition program supporting acquisition, display, graphics, and recording of data from 2150 series instruments. Note, the fastest data rates (typically over 40 Hz) may not be supported by Logger2150, depending on the PC's speed.

Options and Accessories

Cables:

QSR-2150: QSC-2145, Lengths up to 200 meters are available.

QSR-2150A: QSC-2104, Lengths up to 100 meters are available.

Biospherical Instruments serial to USB converter. This converter is specially modified to supply the optimal voltage for the sensor.



USB digital signal manifold: Allows to connect two QSR or QSP sensors to one USB port.



OEM versions are available for special applications. Discuss options with Biospherical Instruments and system manufacturers.